

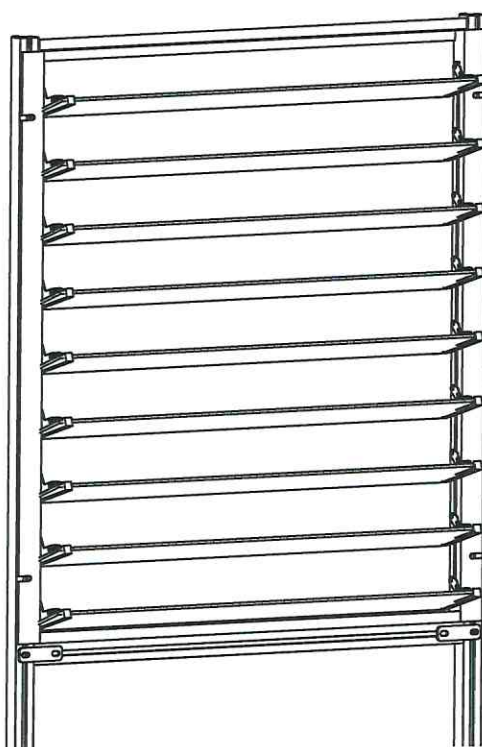
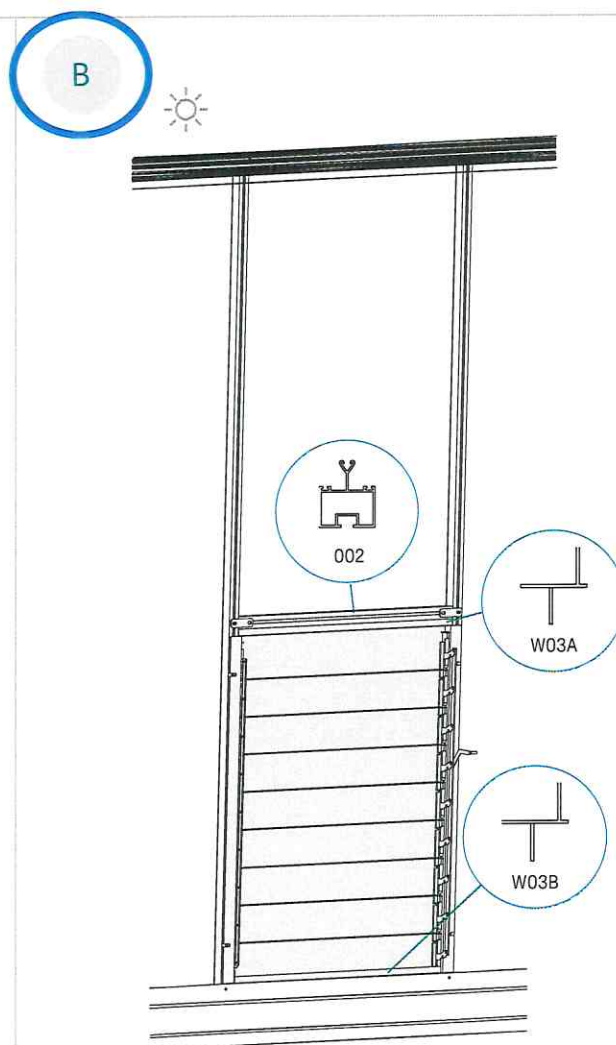


LOUVRE GREENHOUSE VENT INSTALLATION

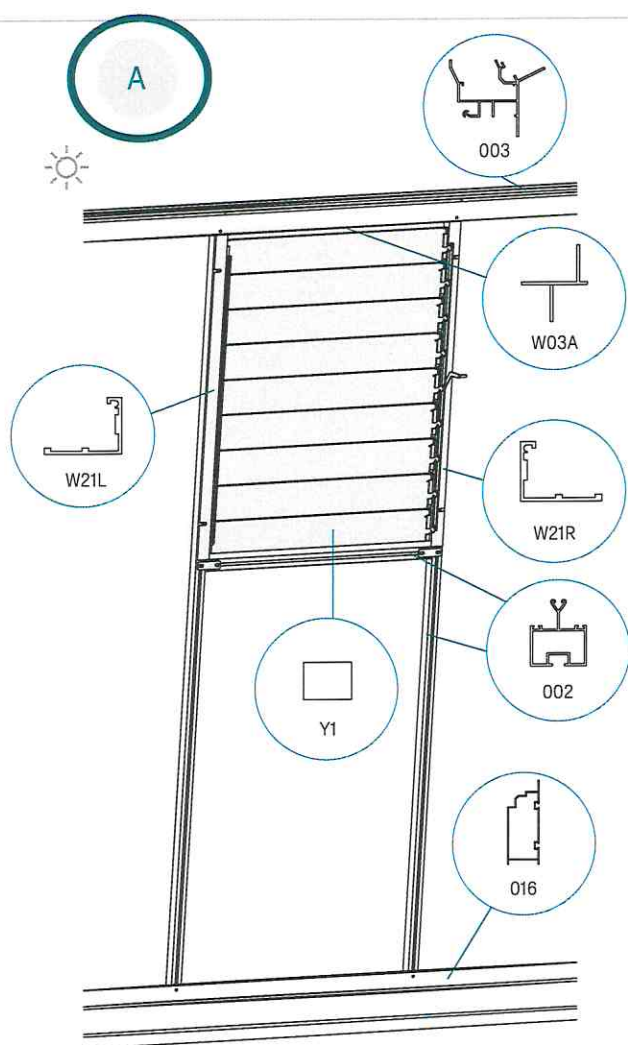

Installation Manual


EN

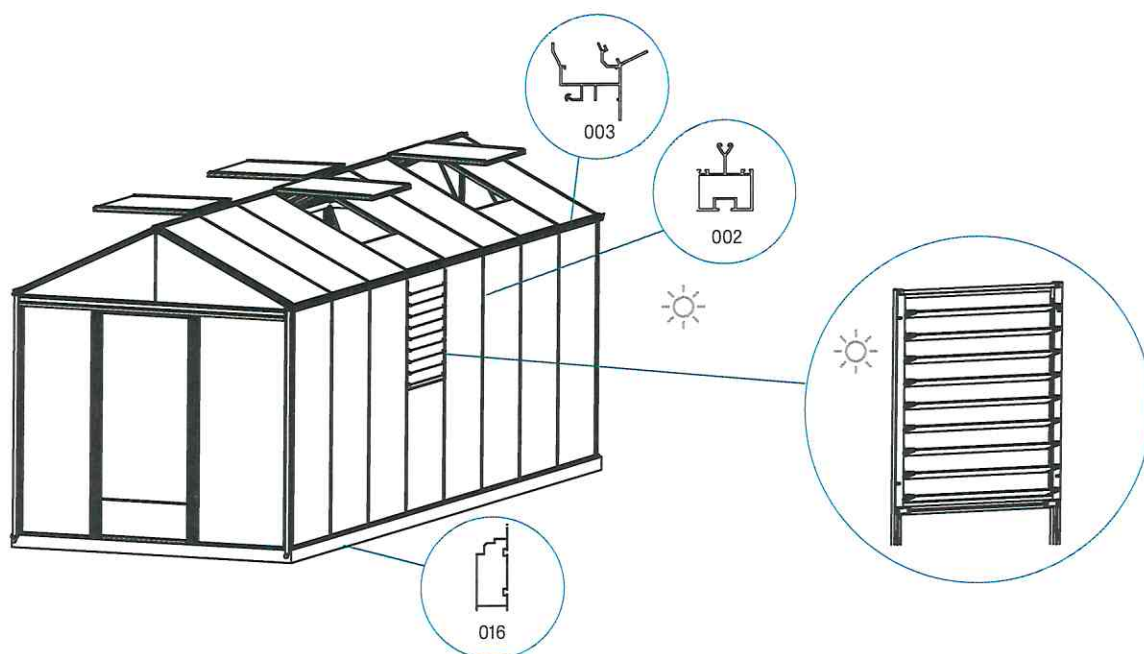


Installation process

Installation process for position A


1

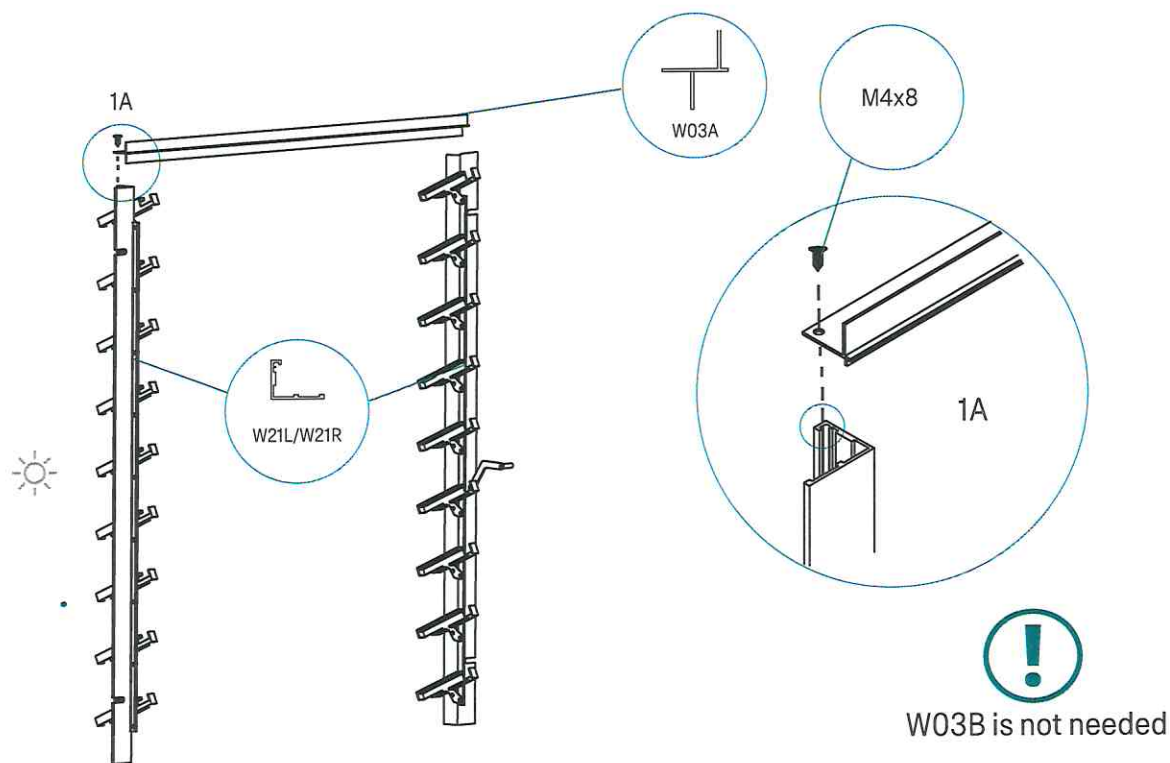


2

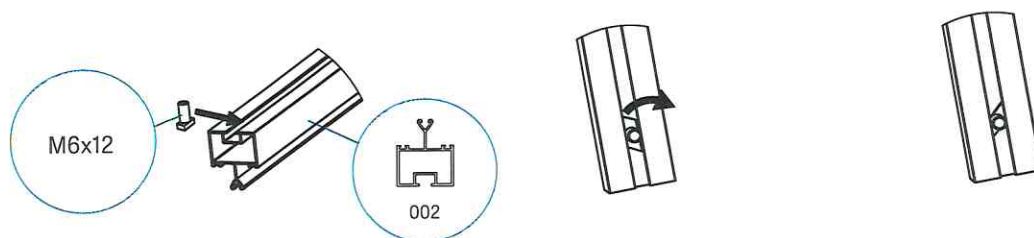







3

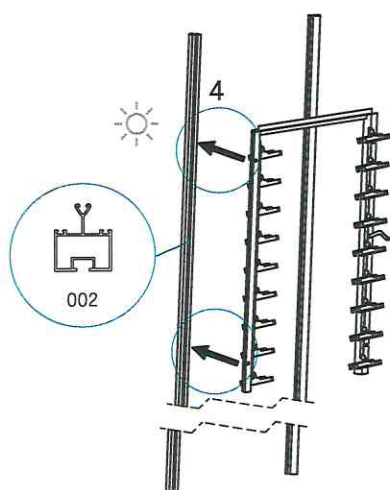


4

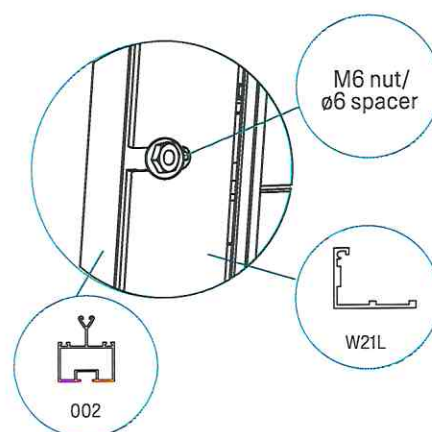


Installation process for position A

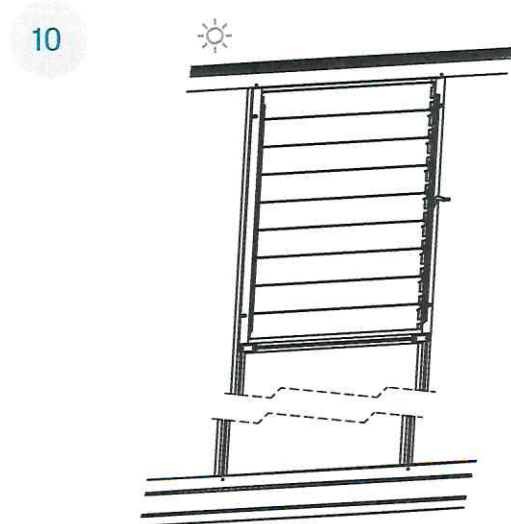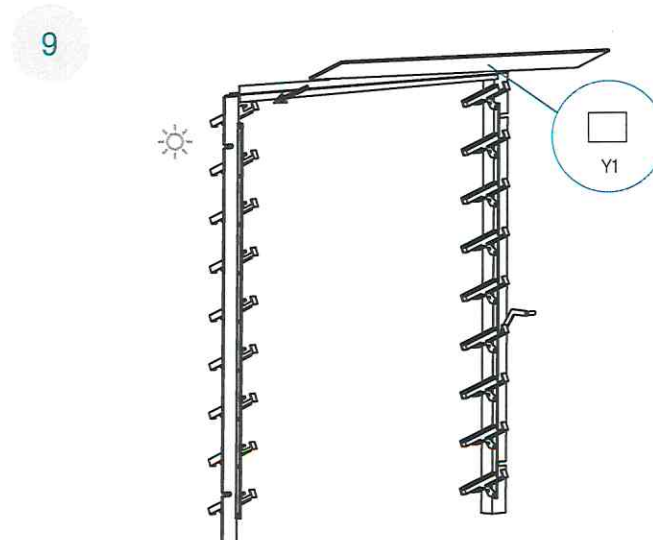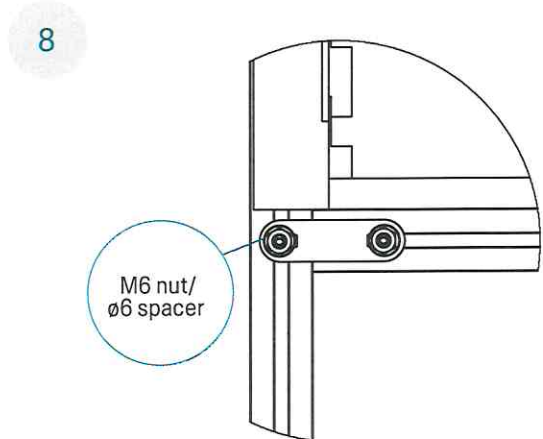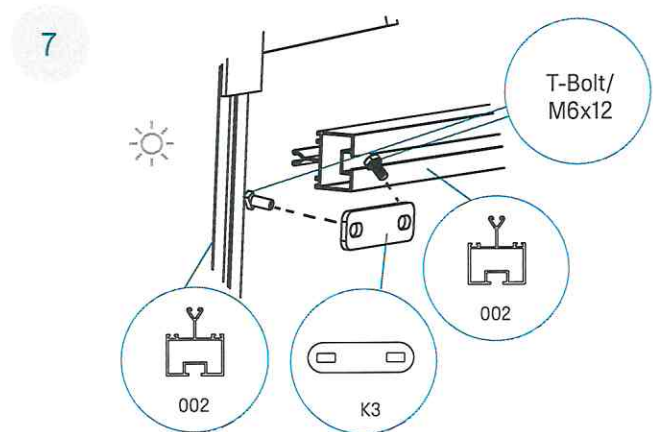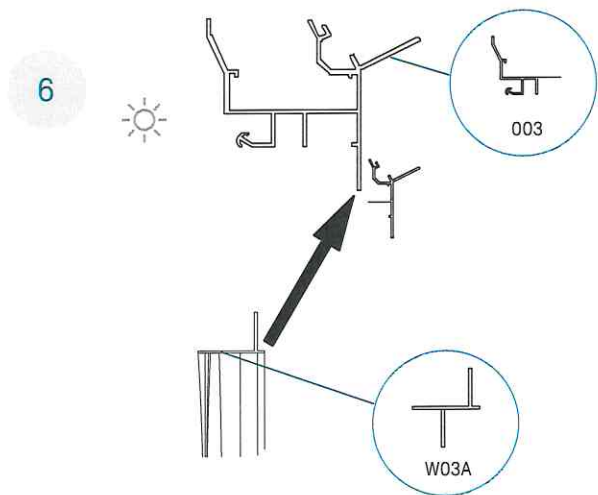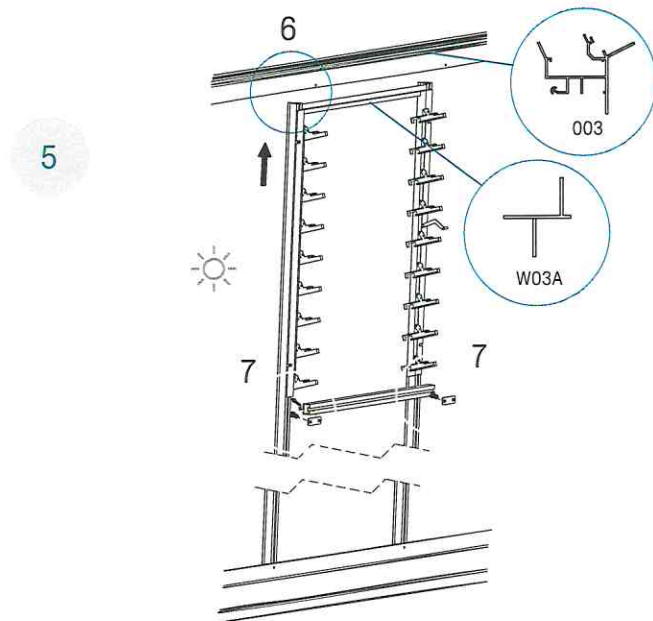


Installation process for position B

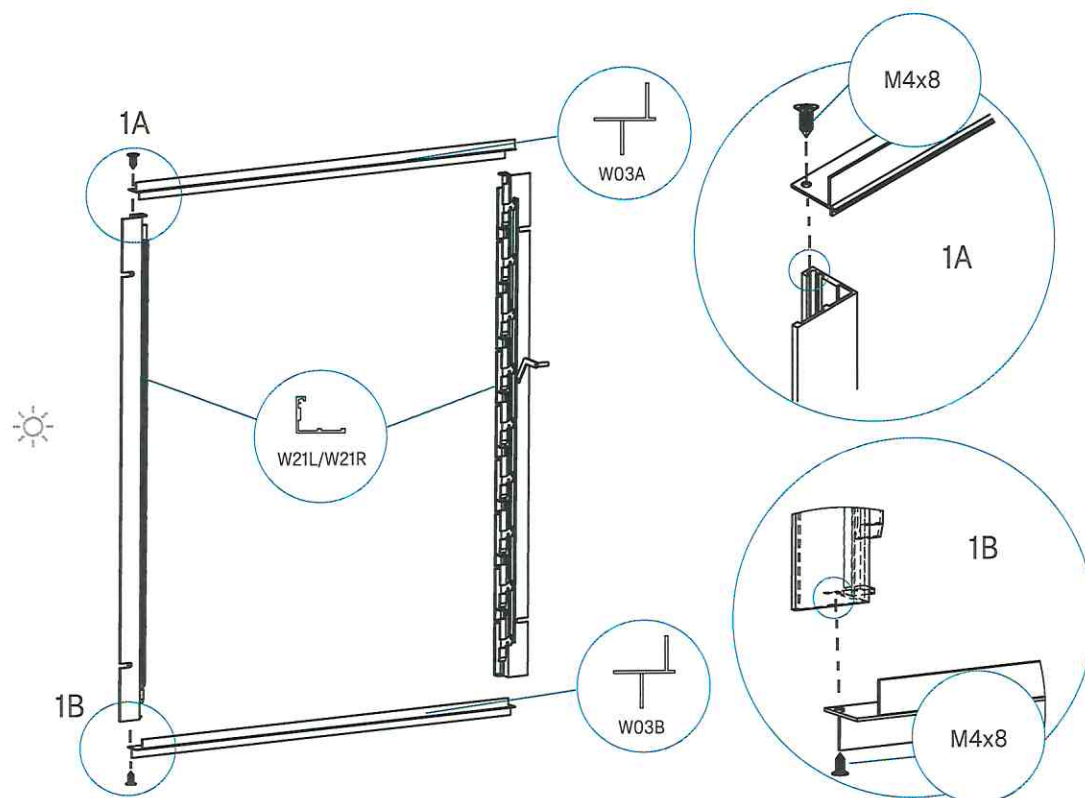


2

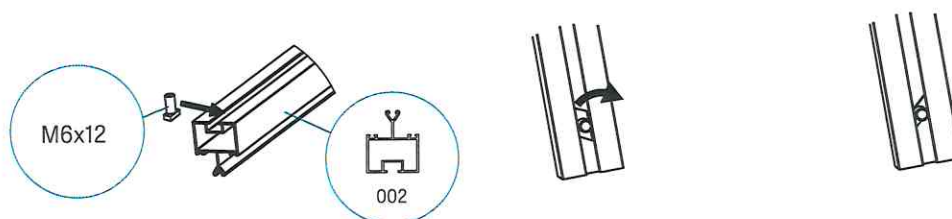

3

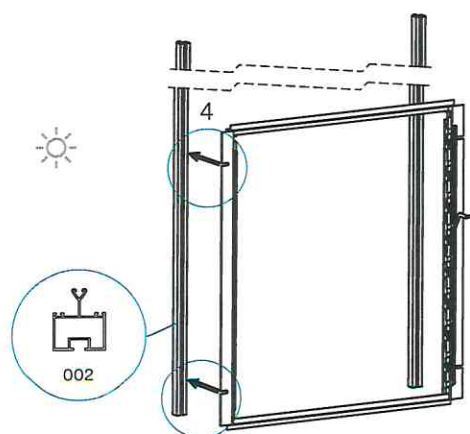


4

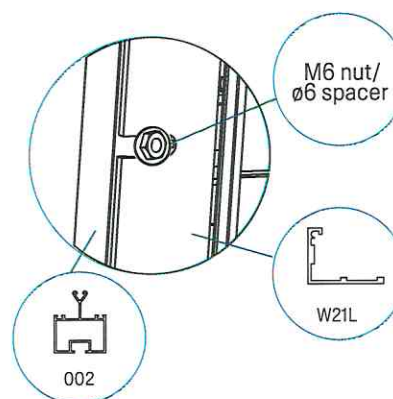


Installation process for position B


5

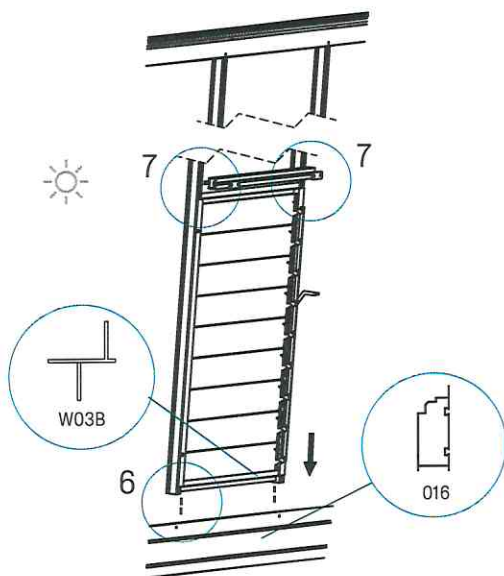


6

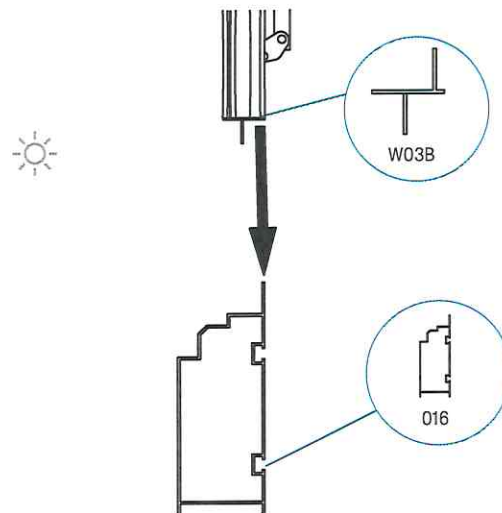


7

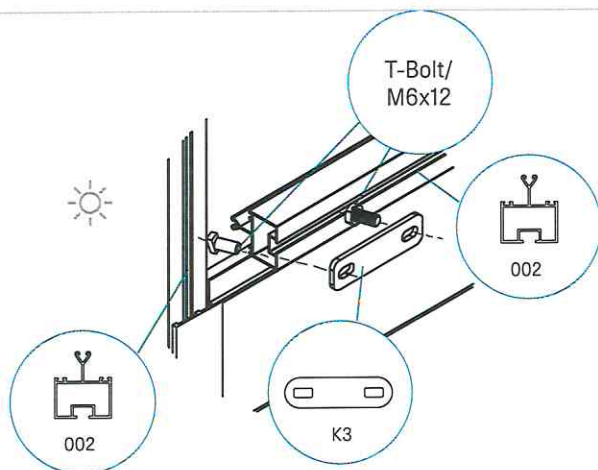

8

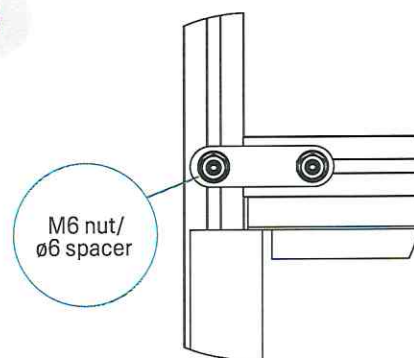


9

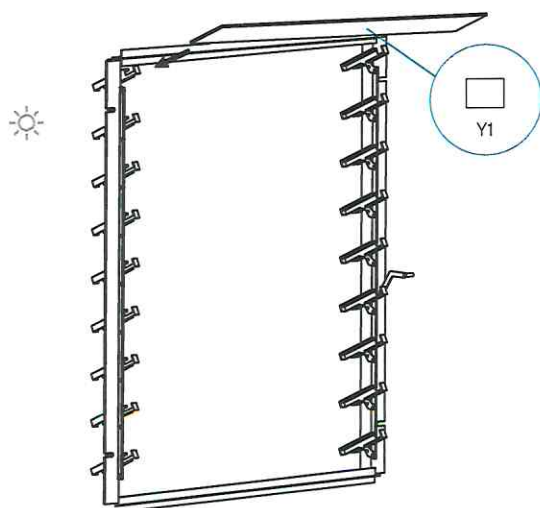

10



Annex 1

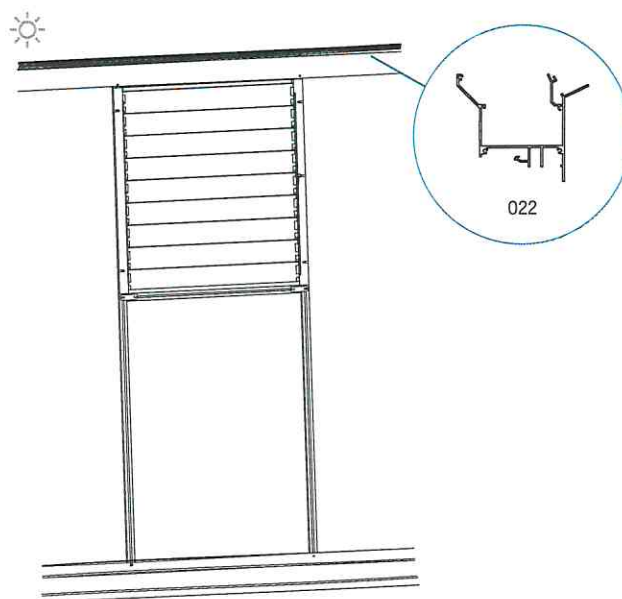


2



3


Annex 2: Auto Opener

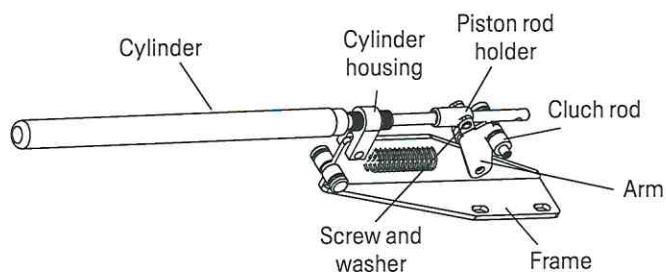


Fasteners

Article	Image
AM-M6x12	
AM-T5-M6x12	
AM-M4x8	
AM-M6	
AM-ø6	


1

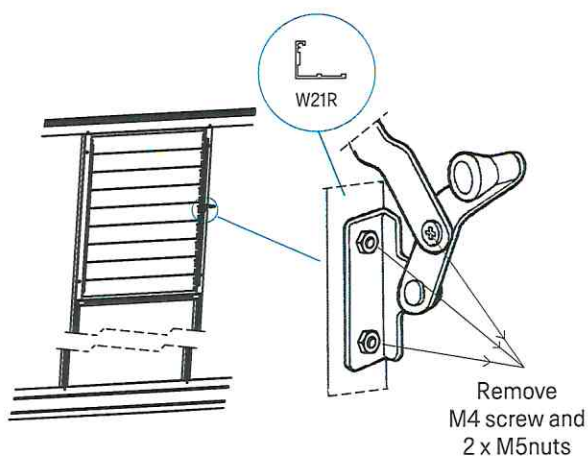


2

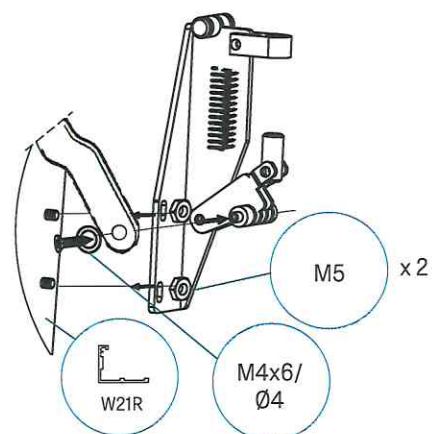

3

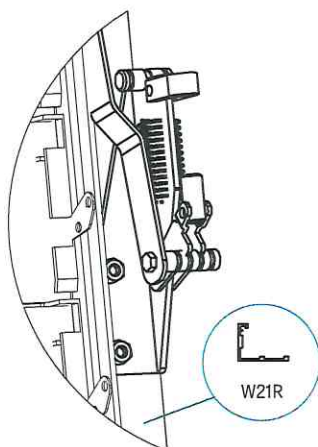

4

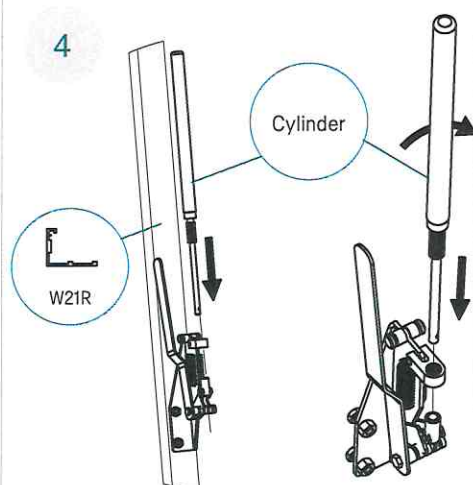

*Place the cylinder in a cool place for at least 30 minutes at a maximum temperature of 50° F or 10° C, in cold water or in a refrigerator.

*DO NOT FREEZE!

5

